



T8 LED Tube Light Intallation Instructions


For Safety purposes a licensed electrician should be used to install these lights

TURN OFF MAIN POWER SWITCH BEFORE DOING ANY WORK

1. Remove old standard fluorescent lamps
2. Open fixture cover shield
3. Remove or bypass existing ballast by unscrewing wire caps from AC line input to ballast. Remove starter cap if one exist. If you don not remove ballast and starter, you will damage LED fluorescent lamps and **VOID** the warranty.
4. Before cutting existing wires from the end lamp sockets to ballast, make sure you cut wires closest to ballast. This allows enough wire length to reach the AC input wires. Dress all cut wires, so there is enough copper wire showing to twist wires together.
5. Twist one set of wires from a pair of lamp sockets on the same side of fixture to black input wire and apply electrical cap. Twist the second set of wires from opposite side lamp sockets to white input wire and apply electrical cap.
6. Install shield cover back on main light fixture.
7. Install new LED fluorescents like standard T8 fluorescent lamps.
8. Turn main power on and lamps are ready for use.



Easy Retrofit

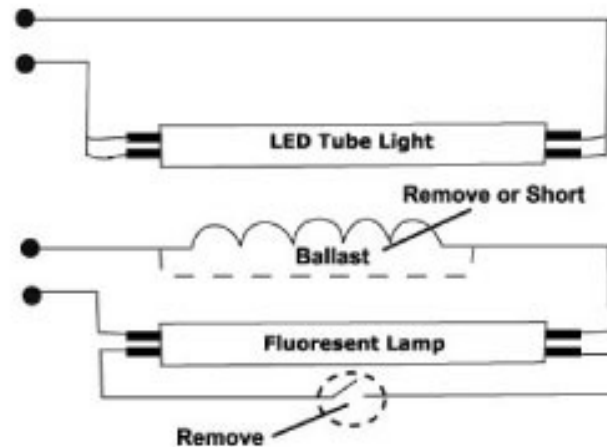

Call for further information:

BravoLight
17914 Sparrows Nest Drive
Lutz, FL 33558
USA
Phone: 813-598-2076